



NanoAccess® - Access Control System Wiring Diagram

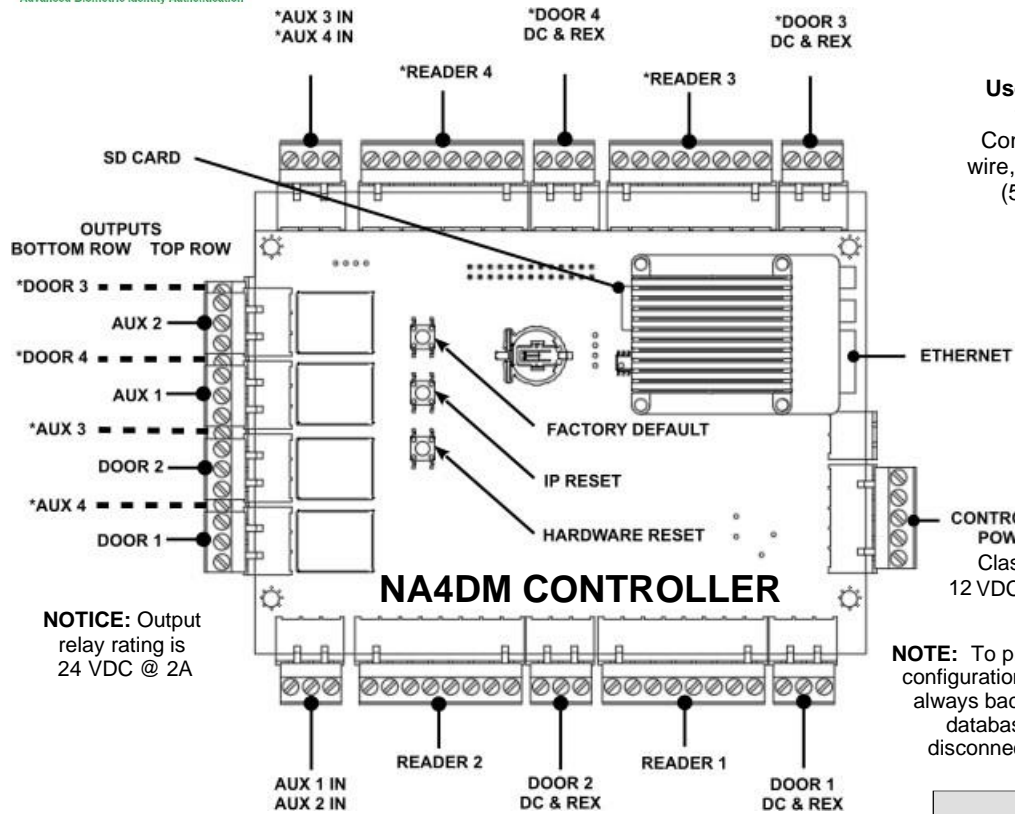

NOTICE: Output relay rating is 24 VDC @ 2A

NA4DM Controller (*indicates only included on 4 Door models)

*OUTPUTS 3 & 4 CONNECTOR *OUTPUTS 1 & 2 CONNECTOR

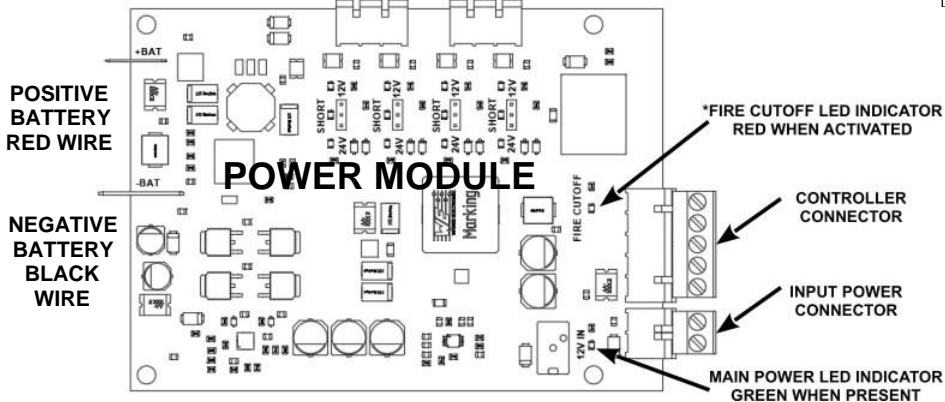

Power Module Layout (*indicates only included on models with lock power)


Use UL 294 Listed Readers
12 VDC @ 200mA max
Connect with twisted shielded wire, 22 AWG (250 FT), 18 AWG (500FT), Belden #9535 or equivalent.

I/O	Default State
Door Status In	Disabled
REX In	Normally Open, Momentary
AUX In	Normally Open, Momentary
Door Out	Not Energized, Single Pulse, 3 Second On
AUX Out	Not Energized, Single Pulse, 3 Second On

NOTE: To prevent loss of configuration information, always backup system's database before disconnecting power.

Amps @ 12 VDC	Output Wire Gauge			
	Wire Gauge and Distance (FT)			
	14	16	18	20
0.5 A	1500	1000	600	375
1.0 A	800	500	300	200
2.0 A	400	240	150	50


Wiegand Reader Wiring

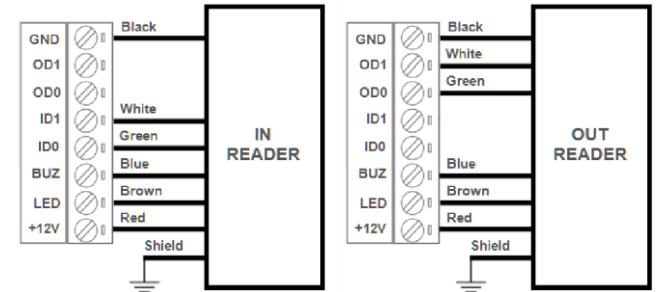

Input Wiring




Door Lock Wiring

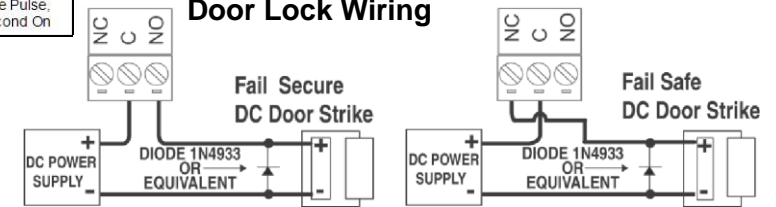


NOTICE:
DO NOT ALTER OR TAMPER WITH THIS DEVICE.
CONTROLLER AND POWER MODULE HAVE NO USER REPLACEABLE PARTS.
System Contains Class 2 Circuits
Refer to NanoAccess installation manual for additional information

Optional Battery Connection

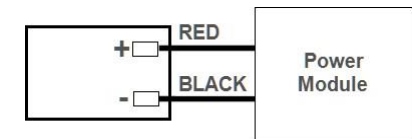

 NOTICE: Qualified technician should replace battery every 2 to 3 years. See installation instructions for safe replacement of battery. Use only 12V 7AH sealed lead acid battery. CHARGE RATE: 900mA. Do not exceed manufacturer specifications.



Output Connector
The max current for any output is 375 mA @ 24V or 700 mA @ 12V